 
 
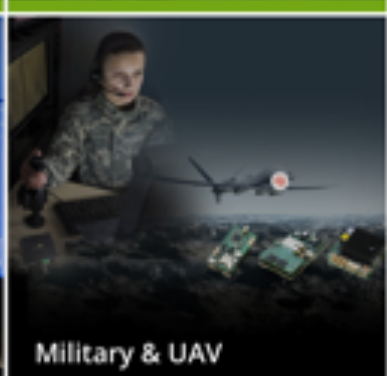 


ANTRICA

ANT-2601/2604 QUICK START GUIDE

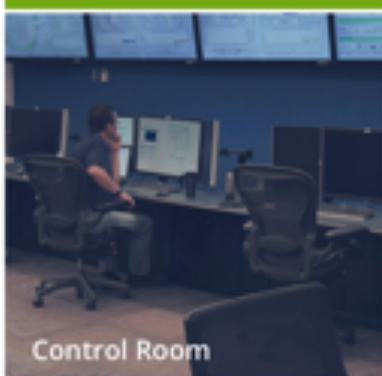

Decoder Series

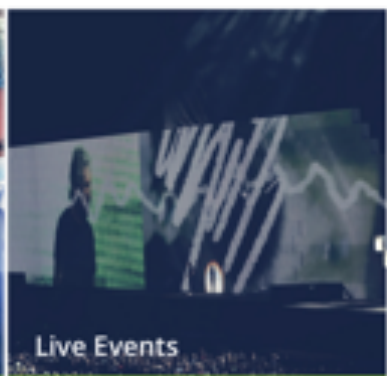

Contents

- 1 Whats in the box
- 2 Setting up the ANT-2601
3. Configuring the ANT-2601
 - 3.1 Staus
 - 3.2 Network Settings
 - 3.3 Decode URL settings
 - 3.4 System Settings
4. Other Information

All ANT-2601 series are a range of H264 or H265 HDMI or Composite Video (scaled) decoders either 1 or 4 channels. 4 channel decoders are actually 4 individual 1 channel decoders so they can be treated as 1 channel units.

1. What's in the Box

The ANT-2601 box contains

- ANT-2601 encoder
- 12 Volt Power converter (requires an IEC AC mains lead)
(4 channel encoders have built in power supplies)
- UK/EU/USA or China IEC 110/240v AC Lead (depending on your location)

2. Setting up the ANT-2601

 
Connect the ANT-2601 to a laptop or PC via an Ethernet switch using standard ethernet cables.

Connect the Output Video using an HDMI or Composite Video cable to a suitable monitor. **NOTE : If HDMI is plugged in the composite BNC output is DISABLED. To use Composite Video out simply plug in just a composite cable to the monitor and leave HDMI unplugged**

Connect the 12 volt power input (Or mains cable for 4 channel units) and switch on. The ANT-2601 will take approximately 2 minutes to boot up. You will see 2/3 LEDs. On powering the Red power LED is ON, after boot up the Green Status LED will be on (middleLED) . The third green light will illuminate when a valid stream is decoded and displayed

You are now ready to setup the ANT-2601 Decoder

3. Configuring the ANT-2601

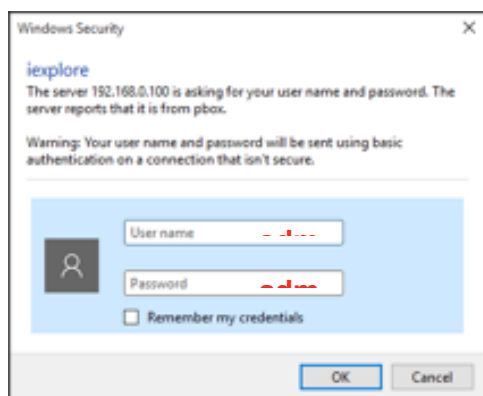

The ANT-2601 default IP address is

192.168.1.160 . (Four channel units come with 4 IP addresses

192.168.1.200/201/202/203) Please set the laptop/PC Ethernet IP address to be in the same sub-domain e.g **192.168.1.XXX**

 
Open Chrome or other up to date browser to just view settings and browse to **192.168.1.160 or**

200/201/202/203 as applicable

You will be asked to LOGIN: **User : admin , password: admin**


NOTE! 4 channel units if factory reset will default to 192.168.1.160

3.1 Status

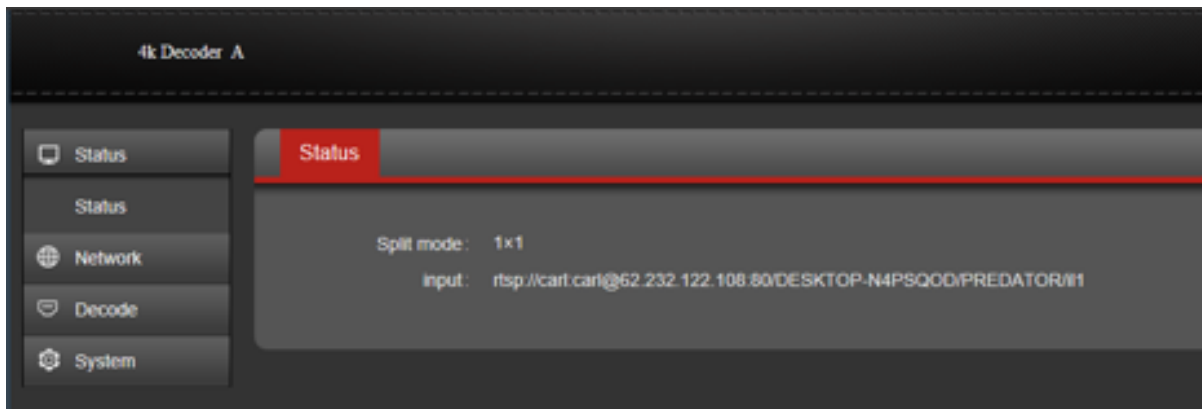

The status tab will show you what RTSP URL has been set up , see Decode section

 3.2 Network

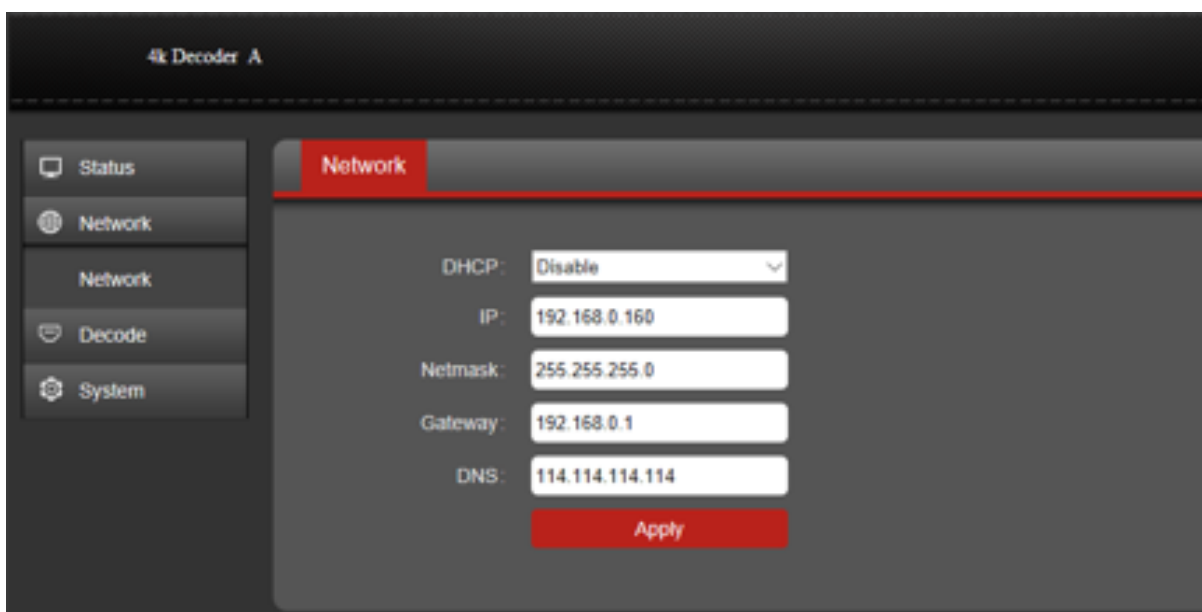

This section allows you set the decoder network IP address , DHCP and other network settings

3.3 Decode :



Here you can change settings to do with :

 
- A) The video output resolution via HDMI or (Composite PAL NTSC only)
- B) The URL for the stream or file path if using a pre recorded file to play

URL support for RTSP HTTP HLS RTMP

Type in the full URL including any authentication and port details in the URL

E.G rtsp://admin:1234@192.168.1.123:554/video1 (ensure authentication and Port info is included)

3.4 System

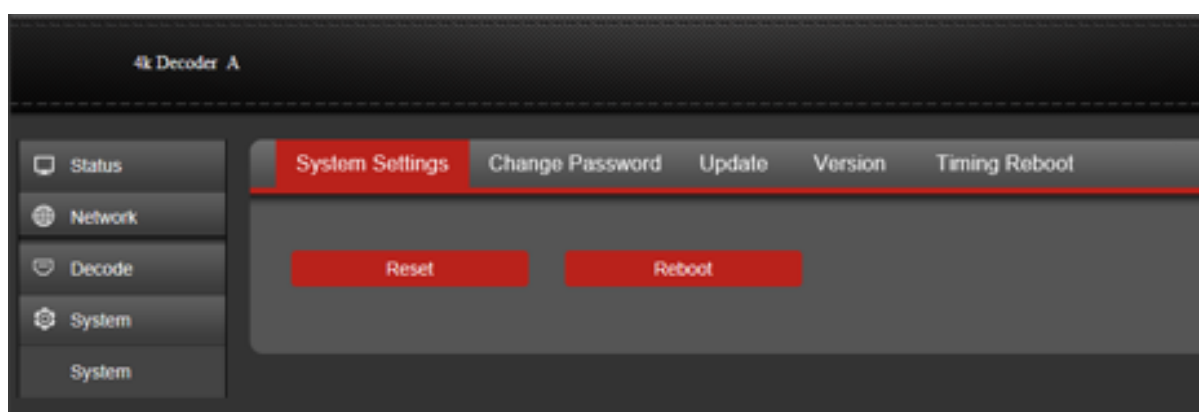

The system settings allows for a factory Reset or Reboot , password change, Firmware update, Firmware VERSION information and Timing Reboot. This later function allows for an automatic reboot to occur after a pre defined time in hours 1-200 hours.

4.0 Other Information

Please visit our website www.antrica.com and browse to the product page (e.g ANT-2601) where you can find a DOWNLOADS SECTION :

- application notes
- Full User manuals
- FAQs
- Firmware
- Other useful information
- More help Open up a Technical Support Ticket from the support page.

Contact: support@antrica.com

Call : +44 1628 626098 x3