

Spot Restore Guide

To enter UBOOT hold down any key on boot-up

Restore using the Rpi Server.

From u-boot prompt type:

```
setenv bootcmd 'dhcp 192.168.0.200:setup_mmc.scr.ub; setenv  
serverip 192.168.0.200; source'  
boot
```

From ssh prompt

```
fw_setenv bootcmd 'dhcp 192.168.0.200:setup_mmc.scr.ub; setenv  
serverip 192.168.0.200; source'  
reboot
```

Restore flash flash partition

From u-boot prompt type:

```
setenv firstboot install  
save  
boot
```

From ssh prompt

```
fw_setenv firstboot install  
reboot
```