

ANT-37100 / ANT-37500 / ANT-37500W QUICK START GUIDE





16 Channel Decoder - 4K & 1080P Multi-Display Decoder



ANT-37100/37500/W Multi Display Decoder

A small multi channel decoder that can decode and display up to 16 cameras on a screen at one time. 128 cameras can be registered and displayed in a sequence. Remote controls allow operators to choose a display mode . Options are any camera full screen 2x2 3x3 or 4x4 modes. Cameras up to 4K can be displayed in full screen or 1080P in 2x2 or 720P in 3x3 or 480P in 4x4 .

Contents

- 1. Whats in the box
- 2. Setting up the ANT-37XXX
- 3. Login: The Login page of the Decoder
- 4. Home: (Setting default views & control view via a web page)
- 5.0 Discover: (Discover ONVIF or setup RTSP URLs)
 - 5.1 ADD an RTSP URL
 - 5.2 Add an ONVIF camera
 - 5.3 Discover an ONVIF camera
- 6.0 Cameras (setting up different views and choosing camera)
- 7.0 Network settings
- 8.0 Display: (setting up the monitor resolution and OSD sizes)
- 9.0 System: Firmware upgrade, saving Configs and more)
- 10.0 Logout screen
- 11.0 Remote control (Using the IR remote supplied)

ANT-37100/37500 Multi Display Decoder

Both models are nearly identical in functionality except the ANT-37100 has a PoE ethernet interface or 12 V supply and the ANT-37500 has a USB-C 5V supply with optional external PoE splitter. The ANT-375000W adds additional WiFi capability to the Ethernet model.

1.0 What's in the Box (varies depending on model)

The ANT-37100 box contains

- ANT-37100 Decoder, Power supply (UK, USA, China, Australia, EU adapters) HDMI cable and Quickstart guide The ANT-37500/W box contains

-The ANT-37500 Decoder , 5V power supply (UK, USA, China, Australia, EU adapters), USB-A to USB-C cable, Optional WiFi Antenna (ANT-37500W) Quickstart Guide . The ANT-37500W will have a WiFi antenna.

The Web interface and functionality is the same for all models except the remote control button functions may vary.

2.0 Setting up the ANT-37XXX

Connect the HDMI output using an HDMI cable to a suitable 4K or 1080P monitor which is switched ON.

Connect the ANT-37XXX to a laptop or PC via an Ethernet switch using standard ethernet cables via a network switch. Laptop should be on a fixed IP in the

192.168.0.XXX range (do not use 192.168.0.222 as laptop IP).

Connect the 5/12v DC power input depending on model and switch on or if using PoE plug in the ethernet cable now.

The ANT-37XXX will take approximately 1 minute to boot up. You will see an ANTRICA logo appear on screen followed by an empty quad view. For a few seconds the IP address of the ANT-37XXX will appear plus firmware version. If network is unplugged it will say No NETWORK.

3.0 Login

The ANT-37XXX default IP address is 192.168.0.222 . Please set the laptop/PC Ethernet IP address to be in the same sub-domain e.g 192.168.0.XXX Open Google Chrome or other modern browser. This is the Log In screen

Spotbox							
	НОМЕ	CAMERAS	DISCOVER	DISPLAY	NETWORK	SYSTEM	LOGOUT
Login							
admin		Pa	ssword			s	JBMIT

Default Log In is: admin admin click Submit.

4.0 Home

You will see the **HOME** screen which will not have any cameras shown at this stage if the ANT-37XXX is in its Factory Default state.

Spotbox						ANTRICA
		HOME CAMERAS	DISCOVER DISPLAY	NETWORK SYSTEM	LOGOUT	
Grid Mode GRID 1x1 v GRID 2x2						
GRID 3x3	Url			Profile		Period
GRID 4x4	RTSP://192.168.1.214:554/1/1					0
FULLSCREEN	onvil://192.168.1.214:80			Unicast:Prof	file1 1920x1080@20	0
Camera 1 onvit://192.168.1.205:80	onvif://192.168.1.215:80			Unicast:Prof	niie2 640x360@20	0
Camera 3 onvif://192.168.1.215:80 ETC onvif://192.168.1.216:80 onvif://192.168.1.205:80	onvif://192.168.1.216:80			Unicast:Prof	mie1 1920x1080@20	0
onvif://192.168.1.214:80 onvif://192.168.1.215:80						
OMME//192.168.1.216:80 RTSP://192.168.1.214:554/1/1 APPLY						

This view shows you which cameras have been registered with details of their Label (A name you give them and is displayed on the HDMI monitor) the URL (ONVIF or RTSP /MPEG-TS) Profile if relevant and Period (time in seconds between automated switching of views) There are two Grid settings : the top one controls what's on screen NOW and the bottom one defines what display you want to be default after a reboot or power up.

To start adding cameras or encoders please go to the DISCOVER tab (Sec 5.0)

5.0 Discover

This section is where you add all camera URLs like RTSP or discover and search for ONVIF cameras and encoders on your network

				DIOCOVER DIOLEAT	
Ado	d Camera				
	RTSP://192.168.0.111:554/stream1	admin			Add
Ve	work Cameras				
	Search				
Ca	meras				
:1	onvif://192.168.1.205:80	admin			Query
	Unicast:Profile1		H264	1920x1080@20	
	Unicast:Profile2		H264	640x360@20	
2	onvif://192.168.1.214:80	admin			Query
	Unicast:Profile1		H264	1920x1080@20	
	Unicast:Profile2		H264	640x369@20	
23	onvif://192.168.1.215:80	admin			Query
	Unicast:Profile1		H264	2560x1440@20	
	Unicast:Profile2		H264	640x360@20	
24	onvif://192.168.1.216:80	admin			Query
	Unicast:Profile1		H264	1920x1080@20	
	Unicast:Profile2		H264	640x360@20	

5.1 ADD an RTSP VRL

RTSP Step1: To add an RTSP URL type the full rtsp URL in the section above **Add Camera.** Do not include the user name and password in the URL add this in the two boxes provided next to the URL box, then click **ADD**.

RTSP Step 2: At the bottom of this page you will see the camera appear in your list;



RTSP Step 3:Save the RTSP by clicking SAVE

RTSP Step 4: Repeat for as many RTSP cameras as you want to add

5.2 ADD an ONVIF Camera

To add an ONVIF camera you can:

- 1) Type in the ONVIF URL in the same box **ADD CAMERA** (see diagram page 5) along with user name and password
- 2) OR you can search the network for ONVIF discoverable cameras. You will need to know the ONVIF user name and password.

(Whichever method you choose the process is the same as follows, we will describe the search method in 2) above.)

5.3 Discover ONVIF Cameras

Step1: To search click the NETWORK CAMERAS- SEARCH shown below

Spotbox				
		HCME	CAMERAS	DISCOVER
Add Camera				
hu	username			password
Network Cameras				
Search				

The Decoder will then scan the network for any discoverable ONVIF cameras or encoders within the network subnet you have allowed in network settings.

Step2: On completion of the scan you will see a list of ONVIF cameras with URLs but empty Username and Password boxes as shown below.

Network Cameras			
Search			
onvif://192.168.1.205:80	usemame	password	Add
onvif://192.168.1.214:80	username	password	Add
onvif://192.168.1.215:80	username	password	Add
onvif://192.168.1.216:80	usemame	password	Add

Step 3: Add user and password details for your selected camera, click ADD The added ONVIF camera now appears at the bottom of this web page click Query

admin	•••••	Query

C10 onvif://192.168.1.205:80

Step 4: Once you Query the chosen camera it will go and fetch all available "**ONVIF PROFILES**". You must now untick either unicast or multicast profiles as they do not mix and then decide which profiles you wish to use and display. The Decoder will use the best profile for the display setting you choose eg 1x1, 2x2, 3x3 or 4x4. So ideally save all the available profiles 3840x2160 or lower. **Click SAVE Step 5:** Repeat as many ONVIF cameras as you wish to add

C10 onvif://192.168.1.205:80	admin	•••••	Save
Multicast:Profile1	H264	1920x1080@20	
Multicast:Profile2	H264	640x360@20	
Unicast:Profile1	H264	1920x1080@20	
Unicast:Profile2	H264	640x360@20	

6.0 Cameras

This section allows you to setup your display preferences once all cameras have been added manually or via ONVIF discovery in section 5.0

			НОМ	= [CA	MERA	s	DISC	OVE	R	DISF	LAY	۱. ۱	IETWO	RK	S	YSTI	EM LC	ogou	т							
Can	era configuration																										
	LABEL	URL		T(S)		REST	ART	GRID	1x1	GRID	2x2	GRID	3x3	GRID	4x4	POSM	V	SCALE		LAT	ENCY	TIMEO	JT	PROTOCO	L	AUDIO	
	Camera 1	onvif://192.168.1.205:80		0	٢	0	٢	1	\$	-	\$	1	÷	1	\$	1	÷	ZOOM	÷	0	٢	0	0	default	\$	disable	
	Camera 2	onvif://192.168.1.214:80		0	٢	0	٢	1	\$	2	\$	2	÷	2	\$	1	*	ZOOM	÷	0	٢	0	0	default	\$	disable	
	Camera 3	onvif://192.168.1.215:80		0	٢	0	٢	1	\$	3	\$	3	\$	3	\$	1	\$	ZOOM	\$	0	٥	0	0	default	\$	disable	
	ETC	onvif://192.168.1.216:80		0	٢	0	٢	1	\$	4	\$	4	\$	4	\$	1	+	ZOOM	\$	0	٢	0	0	default	\$	disable	
	Label	onvif://192.168.1.205:80		0	٢	0	0	-	\$	-	\$	5	\$	5	\$	1	\$	ZOOM	\$	0	٢	0	0	default	\$	disable	
	Label	onvif://192.168.1.214:80		0	٢	0	٥	-	\$	-	\$	6	\$	6	\$	1	\$	ZOOM	÷	0	٥	0	0	default	\$	disable	
	Label	onvif://192.168.1.215:80		0	٢	0	٢	-	\$	-	\$	7	\$	7	\$	1	+	ZOOM	÷	0	٢	0	0	default	\$	disable	
	Label	onvif://192.168.1.216:80		0	٢	0	0	-	\$	-	\$	8	\$	8	\$	1	\$	ZOOM	÷	0	٢	0	0	default	\$	disable	
	Label	RTSP://192.168.1.214:554/1/1		0	٢	0	0	-	¢	1	\$	-	\$	-	\$	1	\$	ZOOM	¢	0	0	0	0	default	\$	disable	
	Label	Uri		0	0	0	٢	-	\$	-	\$	-	\$	-	\$	1	Å	ZOOM	÷	0	Ð	0	÷.	default	÷	disable	

As this is quite a detailed section we have listed the columns and headings below as a simple list.

6.0 Cameras: Continued

LABEL: Name of the Camera that appears as an On Screen Display. This is a user defined text field.

URL: ONVIF or RTSP URL (excluding user name and password for security)
T(S): Time in seconds to display this camera if a display slot is shared
GRID 1X1: Full screen view ...the C number (e.g C3) is the channel number
GRID2X2: 4 cameras displayed as a quad ,top left= position 1 top Right=2 etc
GRID3X3: 9 cameras displayed as 3x3, top left =1 middle top=2 topR=3 etc
GRID4X4:16 camera displayed as 4x4
POSN: Camera LABEL display position Top Left=1 TopRight=2 etc
SCALE: Different aspect ratios can fit a window using zoom or scale (borders)
LATENCY: Adding buffering to help with poor camera connections over internet
TIMEOUT: Number of seconds after a URL disappears before reconnection attempt
PROTOCOL: Default UDP or TCP.

AUDIO: Yes or no only one camera per display mode ,can have audio (top left)

NOTE: See FULL USER MANUAL for a greater in depth description

7.0 Network

Setup network parameters: Default IP is 192.168.0.222 Static
Address : IP address of this Decoder
Gateway: Router Gateway IP
Netmask: Number of subnet IP block addresses visible
DNS: DNS server IP address
NTP: NTP clock server IP address

Interface: eth0					
dhcp: 🔍 static: @					
Netmask	255.255.0.0				
Address	192.168.0.222				
Gateway	192.168.0.1				
DNS	192.168.0.1				
NTP	192.168.0.1				

8.0 Display

This section allows you to setup the LCD monitor display and Font sizes for the various display modes. In 4x4 mode you may want the font to be smaller than in 1x1 mode for example.

Spotbox

FONT SIZE		
GRID 1x1	S	\$
GRID 2x2	S	\$
GRID 3x3	S	\$
GRID 4x4	S	\$
FULLSCREEN	S	\$
APPLY		

9.0 System

System settings include firmware upgrade, configuration, reboot and more.

Update Password: Change admin password to other Click **UPDATE** after any changes

System Update: Update firmware to the latest FW Select the FW file click update (it will be a xxxx.img file)

DO NOT TURN UNIT OFF DURING THIS PROCESS

Save Config: Save all your settings to a single file incase you wish to copy the settings to another unit or restore settings . Configs are firmware sensitive so always use same firmware for each config file.

Load Config: Copy a saved config to this Decoder System Restart: Either Reboot or do a Factory reset and erase all settings to default.

Enable HTTPS: allow secure https access Load SSL Keys; Choose and load the SSL key and certificate .

Display Mode	
640x480-59	0
640x480-60	0
720x576-50	0
720x480-59	0
720x480-60	0
1280x720-50	0
1280x720-59	0
1280x720-60	0
1920x1080-25	0
1920x1080-30	\bigcirc
1920x1080-50	0
1920x1080-59	0
1920x1080-60	0
3840x2160-25	0
3840x2160-30	\bigcirc
	_
APPLY	

Update password	
User	
admin	
Password	
Password (repeat)	
UPDATE	
System update	
Conception and the sector of t	
Choose File NO THE SELECTED	
LOAD UPDATE	
System config	
Choose File no file selected	
LOAD CONFIG SAVE CONFIG	
System restart	
·	
REBOOT FACTORY RESET	
HTTP	
Enable https	
UPDATE	
SSL	
ssi key Chases sile po file selected	
sel certificate	
Choose File no file selected	
LOAD JOL KESET JOL	
System version	
spothoy 2 0 2 - ANT-10740 - Tue 11 May 18:32:33 BST 2021 - Eri Mar 11 14:30:39 2022	
aponov 2012 - 2011-10140 - 100 11 may 10.02.03 DOT 2021 - 111 mdf 11 14.20.39 2022	



12.0 Remote Control

Each unit has a slightly different remote control. Please refer to the full user manual for details;

The **ANT-35000/W** uses an onscreen display and you navigate using the remote buttons

The **ANT-37100** uses the buttons only to control the display options with no OSD. The Basics:

ANT-37500 : Press the black button with 4 white lines to enter the OSD Use left right up down and select to choose a display mode

ANT-37100: Use the number buttons to choose a specific camera or

The up down left right to toggle between 1x1 2x2 3x3 4x4 modes. After selecting a 1x1 view the left right buttons will toggle through full screen views.

=



ANT-37500 Remote





Please visit our website www.antrica.com and browse to the product page (e.g. ANT-37100 ANT-37500) where you can find a DOWNLOADS SECTION :

Or in the main web page there is a **DOWNLOADS** section to find:

application notes

Full User manuals

FAQs

Firmware

Other useful information

More help Open up a Technical Support Ticket from the support page.

Contact: support@antrica.com

Call: +44 1628 626098 x3



www.antrica.com

Antrica Quick Start Guide

ANT-37XXX Series V1_2022

Page 12