




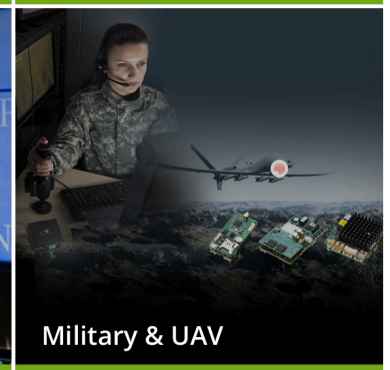

ANT-37100 / ANT-37500 QUICK START GUIDE

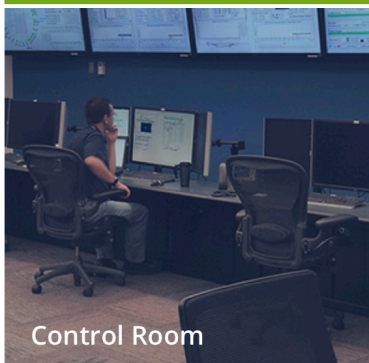

16 Channel Decoder - 4K & 1080P Multi-Display Decoder

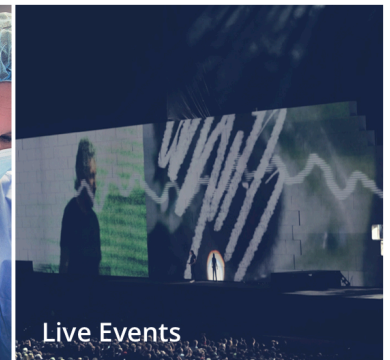

ANT-37100/37500 Multi Display Decoder

- **A small multi channel decoder that can decode and display up to 16 cameras on a screen at one time.**
- **128 cameras can be registered and displayed in a sequence.**
Remote controls allow operators to choose a display mode.
- **Options are any camera full screen 2x2 3x3 or 4x4 modes.**
- **Cameras up to 4K can be displayed in full screen or 1080P in 2x2 or 720P in 3x3 or 480P in 4x4.**

Contents

1. Whats in the box
2. Setting up the ANT-37XXX
3. Login: The Login page of the Decoder
4. Home: (Setting default views & control view via a web page)
- 5.0 Discover: (Discover ONVIF or setup RTSP URLs)
 - 5.1 ADD an RTSP URL
 - 5.2 Add an ONVIF camera
 - 5.3 Discover an ONVIF camera
- 6.0 Cameras (setting up different views and choosing camera)
- 7.0 Network settings
- 8.0 Display: (setting up the monitor resolution and OSD sizes)
- 9.0 System: Firmware upgrade, saving Configs and more)
- 10.0 Logout screen
- 11.0 Remote control (Using the IR remote supplied)

ANT-37100/37500 Multi Display Decoder

Both models are nearly identical in functionality, except the ANT-37100 has a PoE ethernet interface or 12 V supply and the ANT-37500 has a USB-C 5V supply (with optional external PoE splitter and wifi+ethernet).

1.0 What's in the Box (varies based on model)

The ANT-37100 box contains

- ANT-37100 Decoder, Power supply (UK, USA, China, Australia, EU adapters) HDMI cable and Quickstart guide.

The ANT-37500/W box contains

-The ANT-37500 Decoder , 5V power supply (UK, USA, China, Australia, EU adapters), USB-A to USB-C cable, WiFi Antenna ,Quickstart Guide.

The Web interface and functionality is the same for all models except the remote control button functions may vary.

2.0 Setting up the ANT-37XXX

Connect the HDMI output using an HDMI cable to a suitable 4K or 1080P monitor which is switched ON.

Connect the ANT-37XXX to a laptop / PC via an Ethernet switch using standard ethernet cables. Laptop should be on a fixed IP in the 192.168.0.XXX range (**do not use 192.168.0.222 as the laptop IP**).

Connect the 5/12v DC power input depending on model and switch on or if using PoE plug in the ethernet cable now.


The ANT-37XXX will take approximately 1 minute to boot up. You will see an ANTRICA logo appear on screen followed by an empty quad view. For a few seconds the IP address of the ANT-37XXX will appear plus firmware version. If network is unplugged it will say No NETWORK.

3.0 Login

The ANT-37XXX default IP address is **192.168.0.222** . Please set the laptop/PC Ethernet IP address to be in the same sub-domain e.g

192.168.0.XXX

Open Google Chrome or other modern browser. This is the Log In screen

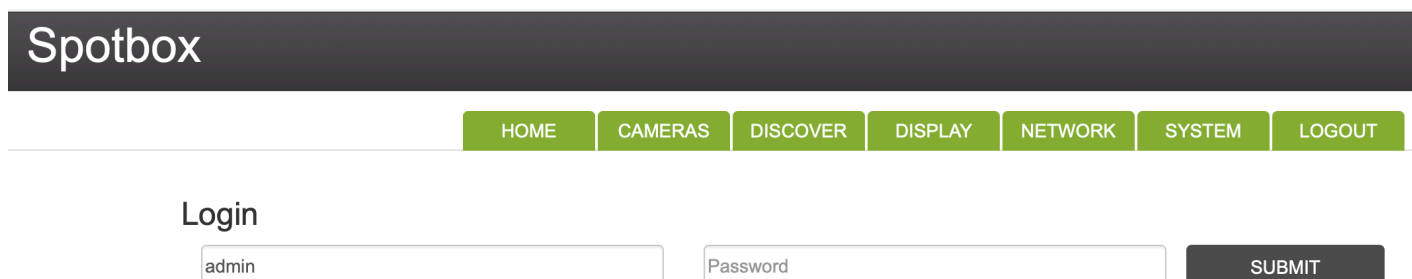

Spotbox

HOME CAMERAS DISCOVER DISPLAY NETWORK SYSTEM LOGOUT


Login

admin Password SUBMIT

Default Log In is: **admin admin** click Submit.

4.0 Home

You will see the **HOME** screen which will not have any cameras shown at this stage if the ANT-37XXX is in its Factory Default state.

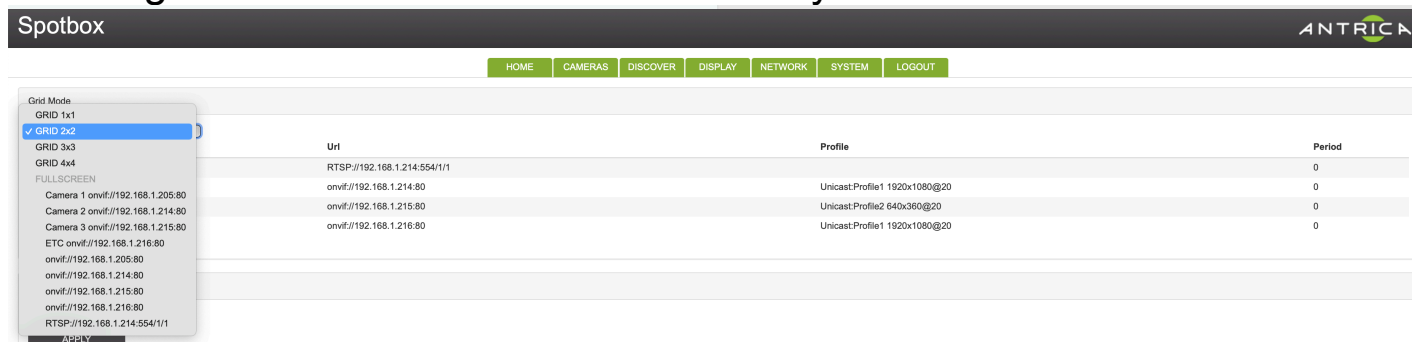

Spotbox ANTRICA

HOME CAMERAS DISCOVER DISPLAY NETWORK SYSTEM LOGOUT

Grid Mode
GRID 1x1
✓ GRID 2x2
GRID 3x3
GRID 4x4
FULLSCREEN

| Url | Profile | Period |
|------------------------------|-------------------------------|--------|
| RTSP://192.168.1.214:554/1/1 | | 0 |
| onvif://192.168.1.214:80 | Unicast:Profile1 1920x1080@20 | 0 |
| onvif://192.168.1.215:80 | Unicast:Profile2 640x360@20 | 0 |
| onvif://192.168.1.216:80 | Unicast:Profile1 1920x1080@20 | 0 |

APPLY

This view shows you which cameras have been registered with details of their **Label** (A name you give them and is displayed on the HDMI monitor) the URL (ONVIF or RTSP /MPEG-TS) **Profile** if relevant and **Period** (time in seconds between automated switching of views). There are two **Grid** settings : the top one controls what's on screen NOW and the bottom one defines what display you want to be default after a reboot or power up.

To start adding cameras or encoders please go to the DISCOVER tab (Sec 5.0)

5.0 Discover

This section is where you add all camera URLs like RTSP/HTTP/MPEG-TS or discover and search for ONVIF cameras and encoders on your network.

Spotbox

HOME CAMERAS DISCOVER DISPLAY NETWORK SYSTEM LOGOUT

Add Camera

RTSP://192.168.0.111:554/stream1 admin **** Add

Network Cameras

Search

Cameras

| | | | | |
|----|--------------------------|-------|------|--------------|
| C1 | onvif://192.168.1.205:80 | admin | **** | Query |
| | Unicast:Profile1 | | H264 | 1920x1080@20 |
| | Unicast:Profile2 | | H264 | 640x360@20 |
| C2 | onvif://192.168.1.214:80 | admin | **** | Query |
| | Unicast:Profile1 | | H264 | 1920x1080@20 |
| | Unicast:Profile2 | | H264 | 640x360@20 |
| C3 | onvif://192.168.1.215:80 | admin | **** | Query |
| | Unicast:Profile1 | | H264 | 2560x1440@20 |
| | Unicast:Profile2 | | H264 | 640x360@20 |
| C4 | onvif://192.168.1.216:80 | admin | **** | Query |
| | Unicast:Profile1 | | H264 | 1920x1080@20 |
| | Unicast:Profile2 | | H264 | 640x360@20 |

5.1 ADD an RTSP URL

RTSP Step1: To add an RTSP URL type the full rtsp URL in this section.

Add Camera. Do not include the user name and password in the URL add this in the two boxes provided next to the URL box, then click **ADD**.

RTSP Step 2: At the bottom of this page you will see the camera appear in your list; **Example C9 RTSP URL - User-Password- SAVE button**

C9 RTSP://192.168.1.214:554/1/1

admin

Save

RTSP Step 3: Save the RTSP by clicking **SAVE**


RTSP Step 4: Repeat for as many RTSP cameras as you want to add

5.2 ADD an ONVIF Camera

To add an ONVIF camera you can:

- 1) Type in the ONVIF URL in the same box **ADD CAMERA** (see diagram page 5) along with **user name** and **password**
- 2) OR you can search the network for ONVIF discoverable cameras. You will need to know the ONVIF user name and password.

5.3 Discover ONVIF Cameras

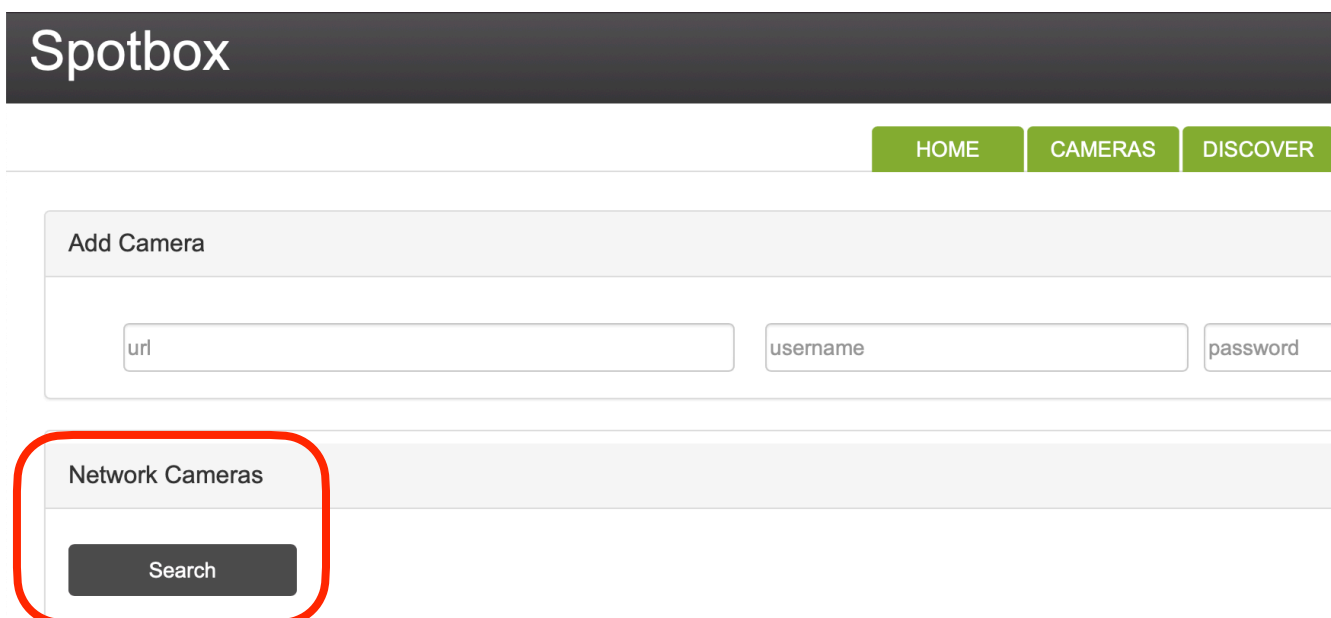

Spotbox

HOME CAMERAS DISCOVER

Add Camera


url username password

Network Cameras

Search

Step1: To search click the **NETWORK CAMERAS- SEARCH** button.

The Decoder will then scan the network for any discoverable ONVIF cameras or encoders within the network subnet you have allowed in network settings.

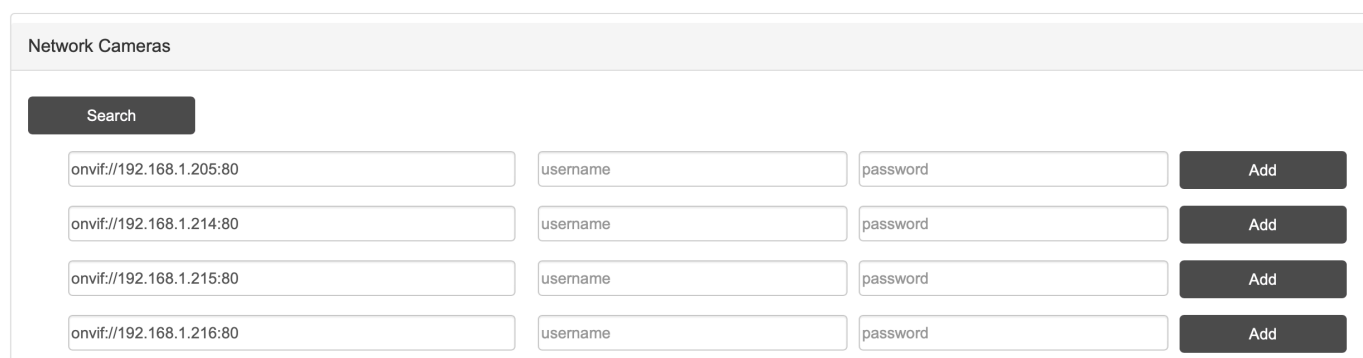

Network Cameras

Search

| | | | |
|--------------------------|----------|----------|-----|
| onvif://192.168.1.205:80 | username | password | Add |
| onvif://192.168.1.214:80 | username | password | Add |
| onvif://192.168.1.215:80 | username | password | Add |
| onvif://192.168.1.216:80 | username | password | Add |

Step 2: On completion of the scan you will see a list of ONVIF cameras with URLs but empty **Username** and **Password** boxes as shown below.

Step 3: Add **user** and **password** details for your selected camera, click **ADD**. The added ONVIF camera now appears at the bottom of this web page click **Query**

C10 onvif://192.168.1.205:80

admin

Query

Step 4: Once you Query the chosen camera it will go and fetch all available “**ONVIF PROFILES**” . You must now untick either unicast or multicast profiles as they do not mix and then decide which profiles you wish to use and display. The Decoder will use the best profile for the display setting you choose eg 1x1 , 2x2 , 3x3 or 4x4 . So ideally save all the available profiles 3840x2160 or lower. **Click SAVE**

Step 5: Repeat as many ONVIF cameras as you wish to add

C10 onvif://192.168.1.205:80

admin

Save

Multicast:Profile1

H264

1920x1080@20



Multicast:Profile2

H264

640x360@20



Unicast:Profile1

H264

1920x1080@20



Unicast:Profile2

H264

640x360@20



6.0 Cameras

This section allows you to setup your display preferences once all cameras have been added manually or via ONVIF discovery in section 5.0

Spotbox

HOME CAMERAS DISCOVER DISPLAY NETWORK SYSTEM LOGOUT

Camera configuration

| | LABEL | URL | T(S) | RESTART | GRID 1x1 | GRID 2x2 | GRID 3x3 | GRID 4x4 | POSN | SCALE | LATENCY | TIMEOUT | PROTOCOL | AUDIO |
|-----|----------|------------------------------|------|---------|----------|----------|----------|----------|------|-------|---------|---------|----------|---------|
| C1 | Camera 1 | onvif://192.168.1.205:80 | 0 | 0 | 1 | — | 1 | 1 | 1 | ZOOM | 0 | 0 | default | disable |
| C2 | Camera 2 | onvif://192.168.1.214:80 | 0 | 0 | 1 | 2 | 2 | 2 | 1 | ZOOM | 0 | 0 | default | disable |
| C3 | Camera 3 | onvif://192.168.1.215:80 | 0 | 0 | 1 | 3 | 3 | 3 | 1 | ZOOM | 0 | 0 | default | disable |
| C4 | ETC | onvif://192.168.1.216:80 | 0 | 0 | 1 | 4 | 4 | 4 | 1 | ZOOM | 0 | 0 | default | disable |
| C5 | Label | onvif://192.168.1.205:80 | 0 | 0 | — | — | 5 | 5 | 1 | ZOOM | 0 | 0 | default | disable |
| C6 | Label | onvif://192.168.1.214:80 | 0 | 0 | — | — | 6 | 6 | 1 | ZOOM | 0 | 0 | default | disable |
| C7 | Label | onvif://192.168.1.215:80 | 0 | 0 | — | — | 7 | 7 | 1 | ZOOM | 0 | 0 | default | disable |
| C8 | Label | onvif://192.168.1.216:80 | 0 | 0 | — | — | 8 | 8 | 1 | ZOOM | 0 | 0 | default | disable |
| C9 | Label | RTSP://192.168.1.214:554/1/1 | 0 | 0 | — | 1 | — | — | 1 | ZOOM | 0 | 0 | default | disable |
| C11 | Label | Uri | 0 | 0 | — | — | — | — | 1 | ZOOM | 0 | 0 | default | disable |

APPLY

As this is quite a detailed section we have listed the columns and headings below as a simple list.

LABEL: Name of the camera that appears as an on screen display. This is a user defined text field.

URL: ONVIF or RTSP URL (excluding user name and password)

T(S): Time in seconds to display this camera if a display slot is shared

GRID 1x1: Full screen view ...the C number (e.g C3) is the channel No.

GRID 2x2: 4 cameras displayed as a quad, top left= position 1 top Right=2

GRID 3x3: 9 cameras displayed as 3x3, top left =1 middle top=2 etc

GRID 4x4: 16 camera displayed as 4x4

POSN: Camera LABEL display position Top Left =1 TopRight =2 etc

SCALE: Different aspect ratios can fit a window using zoom or scale

LATENCY: Adding buffering to help with poor camera links eg internet

TIMEOUT: Number of seconds after a URL disappears before reconnect

PROTOCOL: Default UDP or TCP.

AUDIO: Yes or no: one camera per display mode ,can have audio (top left)

NOTE: See **FULL USER MANUAL** for a greater in depth description

7.0 Network

Setup network parameters: Default IP is 192.168.0.222 Static
Address : IP address of this Decoder
Gateway: Router Gateway IP
Netmask: Number of subnet IP block addresses visible
DNS: DNS server IP address
NTP: NTP clock server IP address

Interface: eth0

dhcp: ☐ static: ☒

Netmask

255.255.0.0

Address

192.168.0.222

Gateway

192.168.0.1

DNS

192.168.0.1

NTP

192.168.0.1

8.0 Display

This section allows you to setup the LCD monitor display and Font sizes for the various display modes.
In 4x4 mode you may want the font to be smaller than in 1x1 mode for example.

Spotbox

FONT SIZE

GRID 1x1

S

↓

GRID 2x2

S

↓

GRID 3x3

S

↓

GRID 4x4

S

↓

FULLSCREEN

S

↓

APPLY

Display Mode

640x480-59

☐

640x480-60

☐

720x576-50

☐

720x480-59

☐

720x480-60

☐

1280x720-50

☐

1280x720-59

☐

1280x720-60

☐

1920x1080-25

☐

1920x1080-30

☐

1920x1080-50

☒

1920x1080-59

☐

1920x1080-60

☐

3840x2160-25

☐

3840x2160-30

☐

APPLY

9.0 System

System settings include firmware upgrade, configuration, reboot and more.

Update Password: Change admin password to other

Click **UPDATE** after any changes

System Update: Update firmware to the latest FW. Select the FW file click update (it will be a xxxx.img file)

DO NOT TURN UNIT OFF DURING THIS PROCESS

Save Config: Save all your settings to a single file incase you wish to copy the settings to another unit or restore settings . Configs are firmware sensitive so always use same firmware for each config file.

Load Config: Copy a saved config to this Decoder

System Restart: Either Reboot or do a Factory reset and erase all settings to default.

Enable HTTPS: allow secure https access

Load SSL Keys; Choose and load the SSL key and certificate .

The screenshot displays the 'System' settings page of a web interface. It contains several sections: 'Update password' with fields for User (admin), Password, and Password (repeat), and an UPDATE button; 'System update' with a file selection field (no file selected) and a LOAD UPDATE button; 'System config' with a file selection field (no file selected) and buttons for LOAD CONFIG and SAVE CONFIG; 'System restart' with buttons for REBOOT and FACTORY RESET; 'HTTP' with an 'Enable https' checkbox and an UPDATE button; 'SSL' with sections for 'ssl key' and 'ssl certificate', each with a file selection field (no file selected) and buttons for LOAD SSL and RESET SSL; and 'System version' showing the current version (spotbox 2.0.2 - ANT-10740) and timestamps for the last update (Tue 11 May 18:32:33 BST 2021) and the next update (Fri Mar 11 14:20:39 2022).

11.0 Logout

Selecting this Tab will automatically Log you out of the web interface.

12.0 Remote Control

Each unit has a slightly different remote control. Please refer to the full user manual for details;

The **ANT-35000/W** uses an onscreen display and you navigate using the remote buttons

The **ANT-37100** uses the buttons only to control the display options with no OSD.

The Basics:

ANT-37500 : Press the black button with 4 white lines



to enter the OSD mode. Select view mode here.

Use left right up down and select to choose a display mode

ANT-37100: Use the number buttons to choose a specific camera or

The up down left right to toggle between 1x1 2x2 3x3 4x4 modes. After selecting a 1x1 view the left right buttons will toggle through full screen views.

ANT-37100
Remote



ANT-37500
Remote





Please visit our website www.antrica.com and browse to the product page (e.g ANT-37100 ANT-37500) where you can find a **DOWNLOADS**

SECTION :

Or in the main web page there is a **DOWNLOADS** section:

This contains:

Application notes

Full User manuals

FAQs

Firmware

Other useful information

More help: Open up a Technical Support Ticket from the support page.

Contact: support@antrica.com

Call : +44 1628 626098 x3

www.antrica.com