

# ANT-37500 4k HDMI h.265 universal multi-viewer decoder

There are a few PDF guides but we also have a video guide.

#### Contents

ANT-375	500 4k HDMI h.265 universal multi-viewer decoder	
Docume	nt info	
	Video guide chapters	
	HOME	
	CAMERAS	
1.3.	VIEWS	2
	SEQUENCE	
1.5.	DISPLAY	2
1.6.	NETWORK	2
	SYSTEM	

We have a video tutorial as a guide for the 3.3.1 or later firmware version.

Please either visit the Antrica website

https://www.antrica.com/product/ant-37500-spotbox4k-multiviewer-14916-views-4k-uhd-hdmi-display-decoder-for-onvif-h-264-h-265/

and scroll down to find the video,

or visit YouTube™

https://www.youtube.com/watch?v=julEUV2OaHk

video name "ANT 37500 full user Guide HD 1080p"

For further help and advice please contact Antrica on:

Email: <a href="mailto:support@antrica.com">support@antrica.com</a>

Phone: +44 1628 626098, during UK office hours, and

ask for technical support

# **Document info**

Version	date	author	Comments
0.1	20-Nov-23	David M	Initial draft for 3.5.7



# 1. Video guide chapters

The video is 21min 11 seconds (21:11). Each webpage / tab has the time that its explanation appears in the video.

#### 1.1. **HOME**

Time: 08:04

Setting up default views on reboot and also what cameras are configured in which view  $1x1\ 2x2\ 3x3\ 4x4$ . Also, we have a live preview of what the HDMI is showing. The Live preview is only available in version 3.5.x or later

#### 1.2. CAMERAS

Time: 00:11

How to add ONVIF and RTSP cameras and name and Tag them , deleting and restoring cameras and adding media  ${\sf NNVIF}$ 

#### 1.3. **VIEWS**

Time 16:33

This section allows you to configure the views in various display modes eg 2x2 3x3 etc Select which cameras appear in these views.

Also, how to create Patterns where cameras appear for several seconds then get replaced by another camera and so on.

## 1.4. SEQUENCE

Time 11:06

Here you can setup a series of automatic sequences to display multiple cameras automatically

#### 1.5. DISPLAY

Time 05:54

Configuring the Display resolution and setting up the RTSP server to re broadcast the Display to another decoder.

### 1.6. NETWORK

Time 09:43

Setup Network defaults IP address etc.

## 1.7. SYSTEM

Time 12:55

Here some of the options are load configs, save configs, update firmware, factory reset and reboot.

For infomation use only Page 2 of 2 last saved: 20-Nov-23