


Setting RTSP Authentication in ANT-2200 and ANT-2210


Open the browser for the encoder. Go to “System” and “version info”, verify the version shows at least:

version: v1.1.0_20170725_80_1_release
 onvif version: version 2.8.32


If the firmware is older than July 25, 2017, the encoder will need to be upgraded to add RTSP Authentication. If it is already at this version or greater, proceed to configuration.

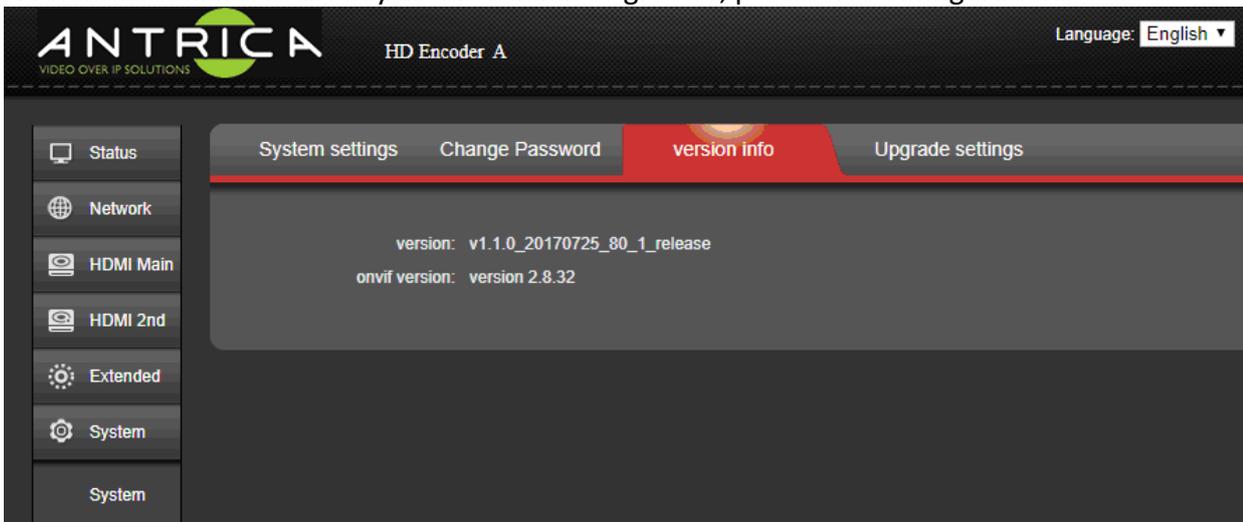

Navigate to “HDMI Main.”

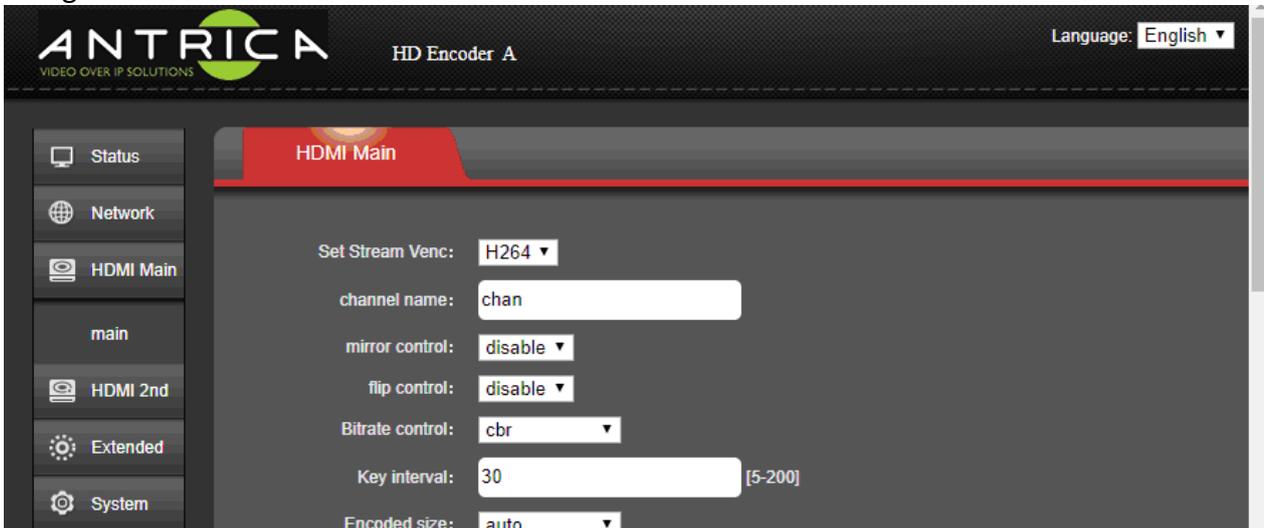

Scroll down to the RTSP settings area. Ensure RTSP is Enable, by default it is Disable

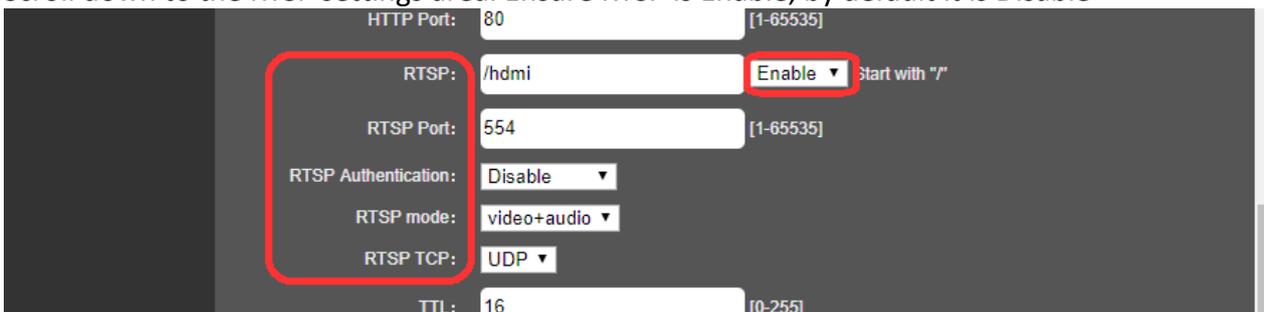

Below “RTSP Port,” there is a setting for RTSP Authentication, which is disabled by default. Click on the box and select “Enable.”

HTTP Port: 80 [1-65535]
 RTSP: /hdm1 Enable Start with "/"
 RTSP Port: 554 [1-65535]
 RTSP Authentication: **Disable** (dropdown menu open, 'Enable' selected)
 RTSP mode:
 RTSP TCP: UDP
 TTL: 16 [0-255]
 unicast IP: 192.168.1.200 Disable

Once enabled, two additional boxes appear for you to enter User Name and Password for the stream.

HTTP Port: 80 [1-65535]
 RTSP: /hdm1 Enable Start with "/"
 RTSP Port: 554 [1-65535]
 RTSP Authentication: Enable
 User Name: mainus [length:six,letter,num]
 Password: mainpw [length:six,letter,num]
 RTSP mode: video+audio
 RTSP TCP: UDP
 TTL: 16 [0-255]
 unicast IP: 192.168.1.200 Disable

These are different than the administrator credentials for the encoder. After entering these credentials, be sure to click “Apply” at the bottom of the screen to retain those changes, or they will revert when the page refreshes.

Navigate to the home page and the Access address with username and password is shown. If using the default values the address will be:

rtsp://mainus:mainpw@192.168.1.168:554/hdm1

ANTRICA HD Encoder A Language: English
 Status Access address Video parameters Audio parameters Hardware status Preview
 HDMI status
 2nd status
 Network
 HDMI Main
 HDMI 2nd
 Extended
 System
 Access address: rtsp://mainus:mainpw@192.168.1.168:554/hdm1