





**Steaming a Video File on VLC to LAN with RTSP**


- 1) To open the streaming configuration, select **Media > Stream** (*CTRL + S will also open the same window*)

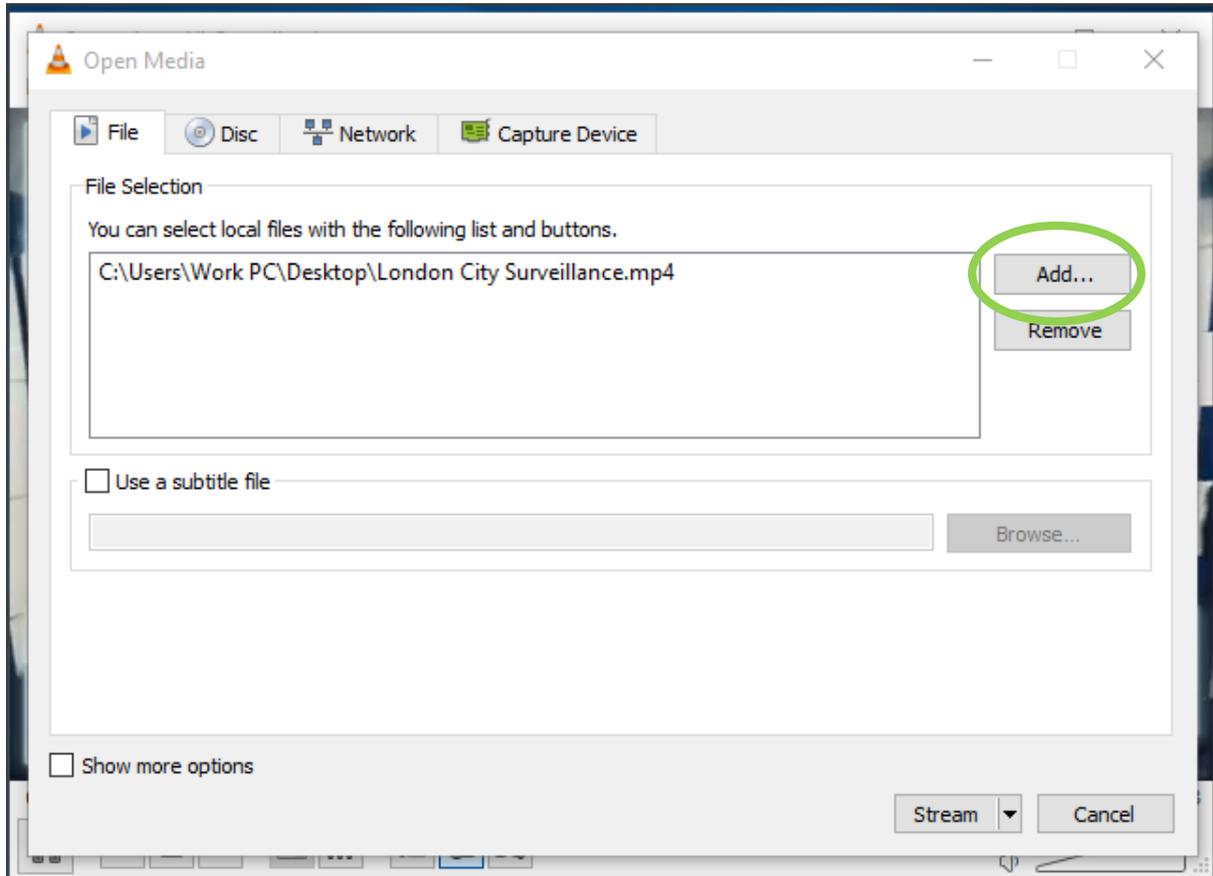


- 2) Select a video file to stream by pressing **Add...** & navigate to the file of choice for streaming. Then select stream to continue.

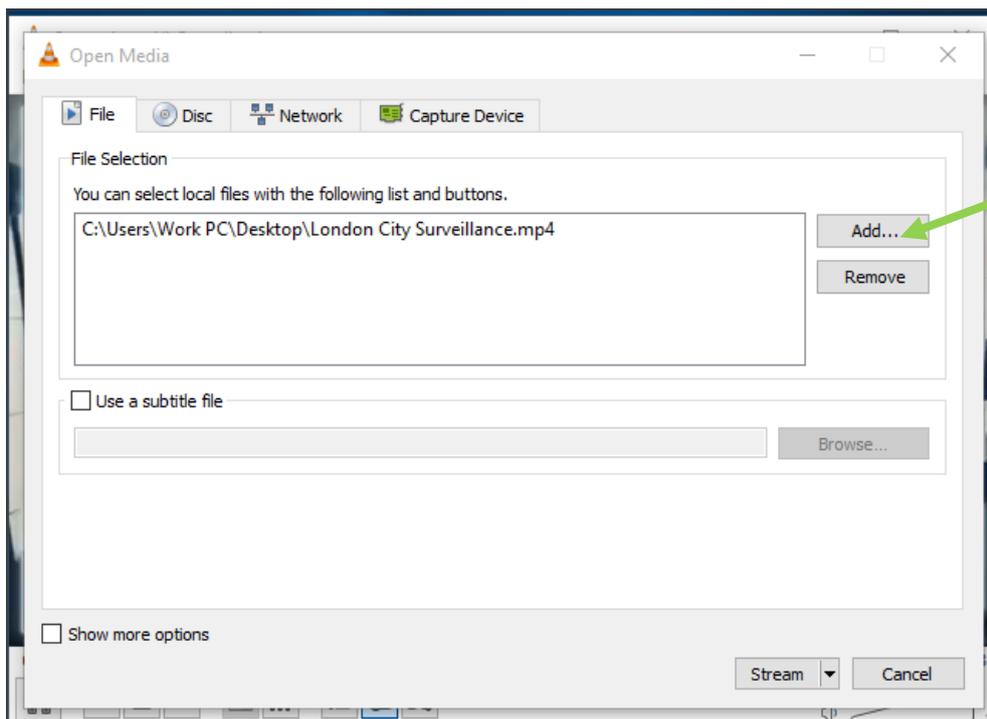

3) Continue to the next page by selecting Next.

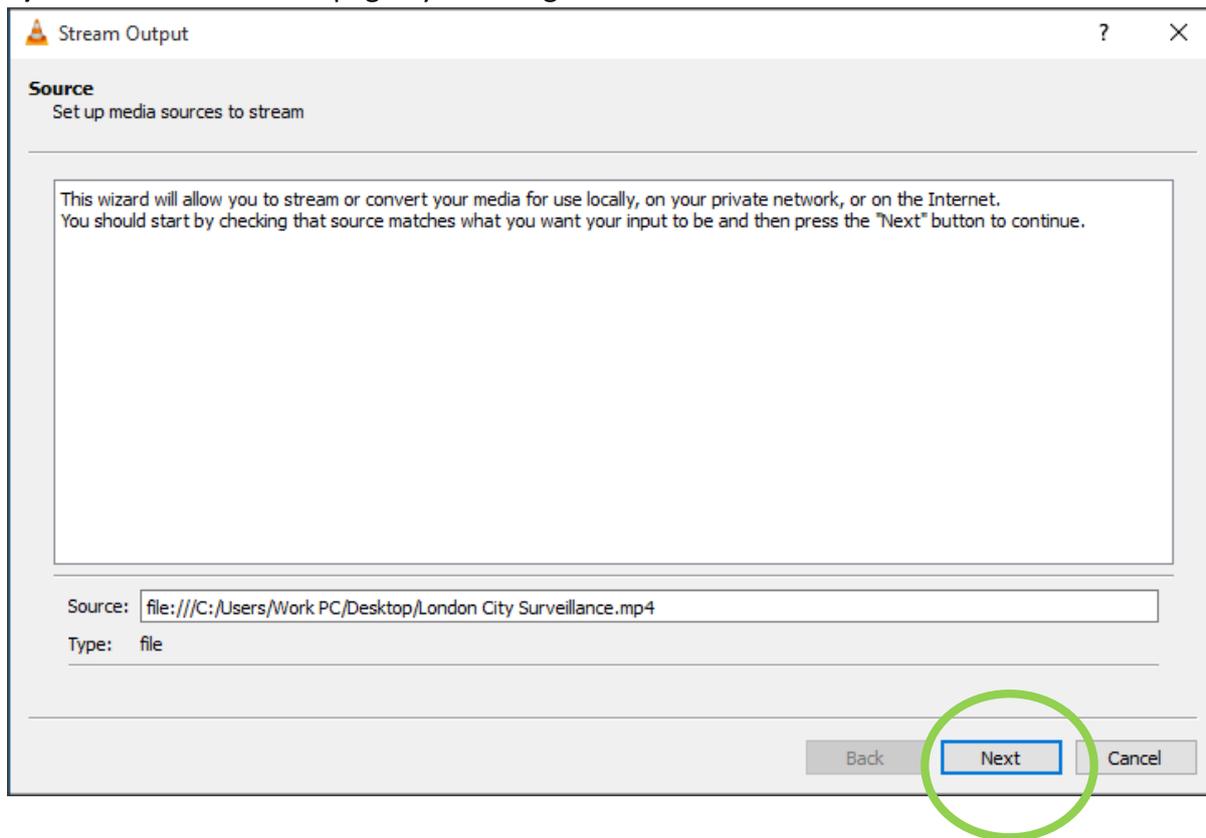

4) Select from the 'New Destination' dropdown RTSP, tick 'Display locally' if you want to view the video as it streams.

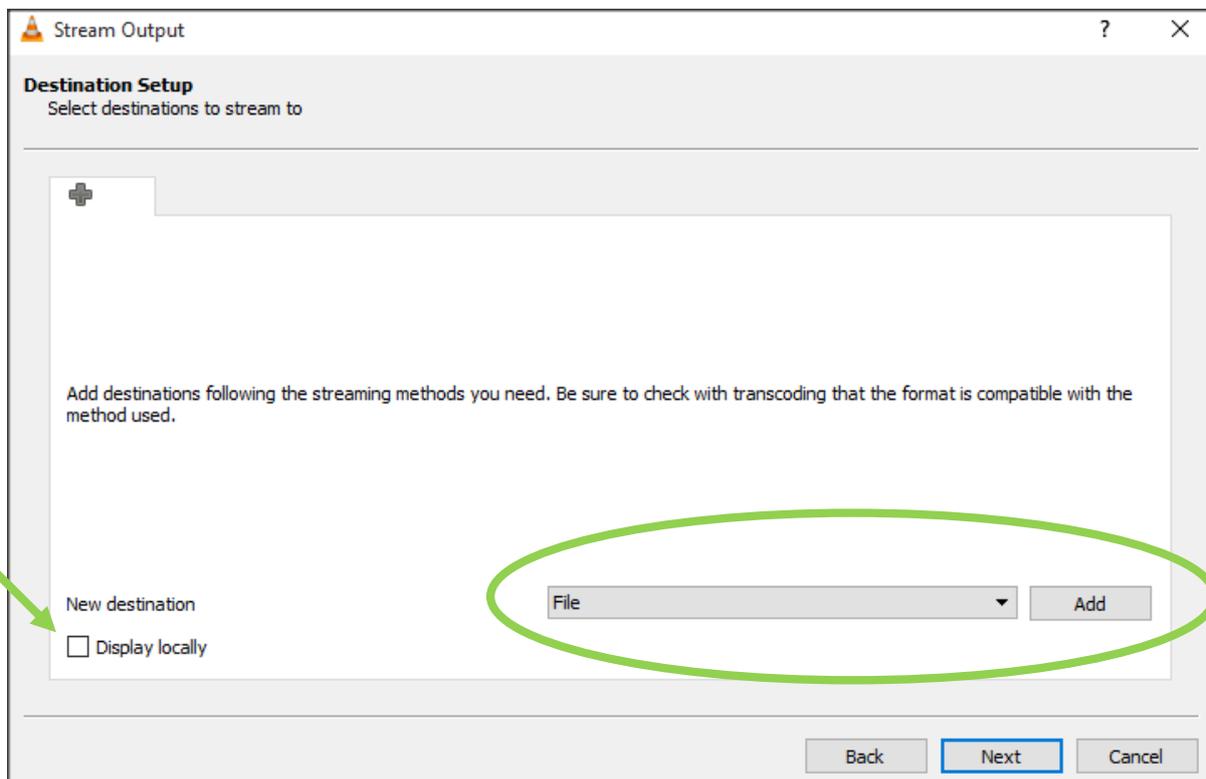

- 5) To setup the RTSP stream, enter your preferred port number (*example: 554*) and path identifier (*example: /test*). Then select Next to continue.

Stream Output

**Destination Setup**  
Select destinations to stream to

RTSP

This module outputs the transcoded stream to a network via RTSP.

Port 8554

Path /

Back Next Cancel

- 6) Untick 'Activate Transcoding' and continue by pressing Next.

Stream Output


**Transcoding Options**  
Select and choose transcoding options

Activate Transcoding

Profile Video - H.264 + MP3 (MP4)

Back Next Cancel

7) Select '*stream all elementary streams*' and click Stream to begin streaming your file.

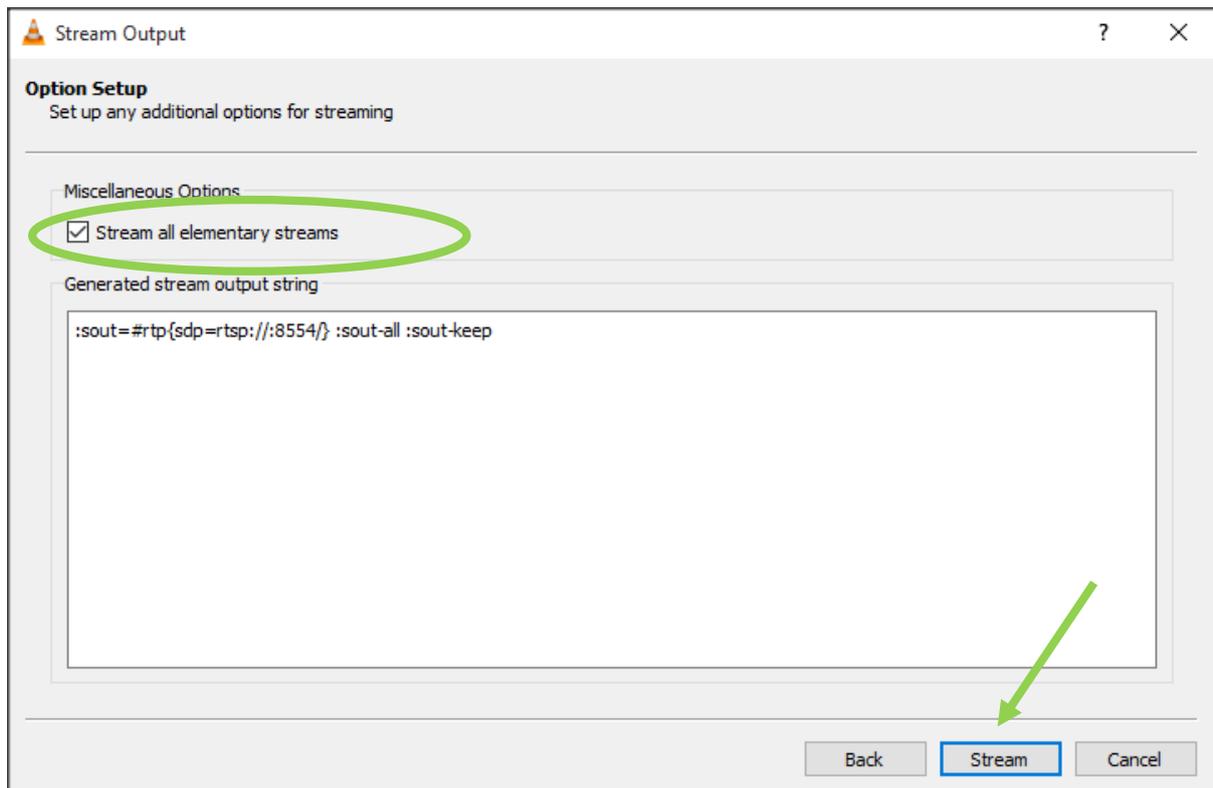

8) You can now open VLC to view your stream on the LAN. Select



## Help and Further Support

Please visit <http://antrica/freshdesk.com> where you can find:

- Application notes
- User manuals
  - FAQs
  - Firmware
- Other useful information
- Open up a Technical Support Ticket

**Contact: [support@antrica.com](mailto:support@antrica.com)**