

# Control of PTZ camera, using the ANT-35000<sup>1</sup> web GUI

#### Contents

Control	of PTZ camera, using the ANT-35000 web GUI	. 1
1.	Camera Setup	. 1
2.	ANT-35000 setup	. 1
2.1.	Code version	. 1
2.2.	ANT-35000 setup	. 1
3.	Connection between ANT-35000 and camera	.2
4.	Using the Web interface Joystick	. 3

### 1. Camera Setup

The camera used is an ANT-SP1080P60x20. From the setup menu the (SETUP) is as shown in Figure 1, below. The Baudrate of 9600 is required for the ANT-35000 setup



Figure 1 : Camera Serial setup menu

## 2. ANT-35000 setup

#### 2.1. Code version

Virtually all the code releases for the ANT-35000A, ANT-35000A1, ANT-35000H and ANT-35000H1 will work. This document has been created and tested with V3.804R01.

#### 2.2. ANT-35000 setup

Go to the serial setup section of the web interface; Web page -> Setup (top right of "live" page) -> Device (left side of "setup" page) -> Serial, see Figure 2, below.

<sup>&</sup>lt;sup>1</sup> Models: ANT-35000A, ANT-35000A1, ANT-35000H and ANT-35000H1



Figure 2 : ANT-35000 Web GUI, serial setup

			Live
🐻 Video&Audio	+	COM1 (RS-232 Port)	
📑 Image	+	Protocol RS-232	
Setwork	+	Bitrate 9600 v bps	
Event	+	Data Bit 8 Bits	
Record	+	Parity None *	
🚍 Device	-	Stop Bit 1 Bits	
<ul> <li>Information</li> </ul>		Pass Through TCP Port 0 (0=Disable)	
Serial			
📩 PTZ	+	COM2 (RS-422/485 Port)	
& User	+	Protocol RS-485	
🍖 System	+	Bitrate 9600 v bps	
		Data Bit 8 Bits	
		Parity None v	
		Stop Bit 1 Bits	
		Pass Through TCP Port 0 (0=Disable)	
		485 Terminating Resisters Off	
			)
		Apply	

Select RS-485 from the protocol drop down menu. Then select the Bitrate (Buadrate) and other settings to match that of the camera. See Figure 2, above for sample settings.

#### 3. Connection between ANT-35000 and camera

In the example shown the wire used has the colours and function as described in Table 1

Function	Wire colour
RS485 +	Blue
RS485 -	White / blue Strip

Table 1 : Serial data cable

In Figure 3, below, and Figure 4, below, the wiring and cable colour for the RS-485 serial connection between the ANT-35000 and the PTZ camera are shown.



Figure 3 : Serial wiring on ANT-35000



Figure 4 : Serial wiring on Camera



## 4. Using the Web interface Joystick

For best results use Internet Explorer. In the images in Figure 5, below, and Figure 6, below, show captures of the web interface before an during the joystick operation. Figure 5 show the camera position while the camera is at rest. Figure 6 shows the red dot of the joystick being pushed up and the image from the camera is moving down, as the camera head is tilting up.



Figure 5 : screen capture of web interface



Figure 6 : screen capture of web interface, while joystick is being used



Figure 6, above, shows the joystick being moved and the corresponding movement of the video image.