


SRT with AES Encryption

On the ANT-35000H1/A1 and new ANT-35100 Encoders, you can use AES encryption to transmit video through Setup > Network > SRT menu.

Additionally, on the ANT-36100 Decoder, there isn't a separate Setup > Network > SRT menu.


Instead, you can select 'Remote Type' as SRT in the Setup > Network > Remote menu. This allows the decoder to decode data encrypted with AES from the encoder.

Encoder: ANT-35000, ANT-35100

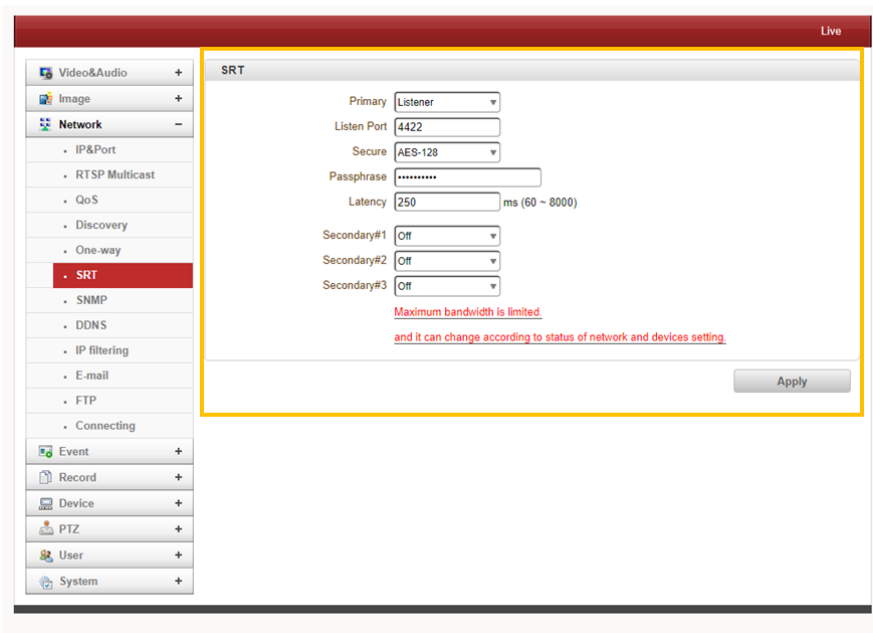

The screenshot shows the 'SRT' configuration page in a web interface. The left sidebar contains a menu with categories: Video&Audio, Image, Network, Event, Record, Device, PTZ, User, and System. Under the 'Network' category, 'SRT' is selected. The main content area is titled 'SRT' and contains the following fields: Primary (Listener), Listen Port (4422), Secure (AES-128), Passphrase (masked), Latency (250 ms), Secondary#1 (Off), Secondary#2 (Off), and Secondary#3 (Off). A red warning message states: 'Maximum bandwidth is limited and it can change according to status of network and devices setting.' An 'Apply' button is located at the bottom right.

Decoder: ANT-36100

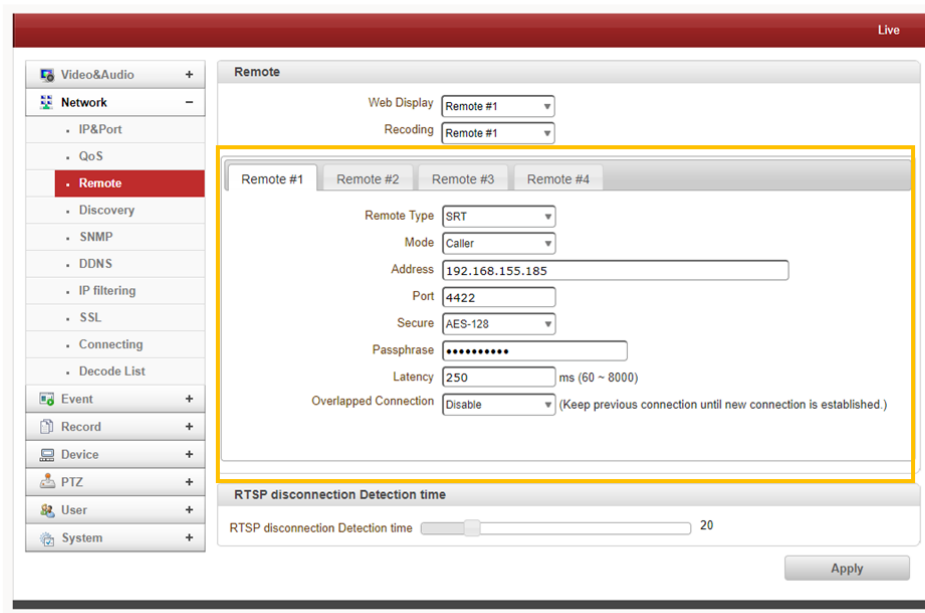

The screenshot shows the 'Remote' configuration page in a web interface. The left sidebar contains a menu with categories: Video&Audio, Network, Remote, Event, Record, Device, PTZ, User, and System. Under the 'Network' category, 'Remote' is selected. The main content area is titled 'Remote' and contains the following fields: Web Display (Remote #1), Recoding (Remote #1), Remote #1 (selected), Remote Type (SRT), Mode (Caller), Address (192.168.155.185), Port (4422), Secure (AES-128), Passphrase (masked), Latency (250 ms), and Overlapped Connection (Disable). A note below the Overlapped Connection field reads: '(Keep previous connection until new connection is established.)'. At the bottom, there is a section for 'RTSP disconnection Detection time' with a slider set to 20. An 'Apply' button is located at the bottom right.