

**PTZ Airflow/Heat Control Settings**



- Enter Setup Menu, by pressing separately **9** then **5** then **PRE**



- Using the joystick and **open** button to select, navigate to **Settings > Other > Temp Mode**



Auto - automatically control the fan and inside heater.

Cool 1 - moderate fan speed enabled

Cool 2 - fast fan speed enabled

Defrost - inside heater on

ANTRICA