




ANT-6000 RS-232 Pinout

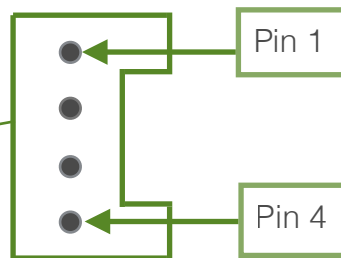

Serial Connector Pin Assignments of the ANT-6000E/ANT-6000D



- Pin 1 : VCC (3.3V)
- Pin 2 : TXD (ANT-6000 to PC)
- Pin 3 : RXD (PC to ANT-6000)
- Pin 4 : GND