

UAV Micro ANT-1772



Quick Start Guide

Demo Default Settings-Micro

- Micro ANT-1772 default 192.168.0.30
- SD2 is used for composite video
- HD1 is used for HD-SDI
- Mux1 : HDSDI MPEG TS 227.2.2.7 port 1234
 Udp://@227.2.2.7:1234
- Mux2 : SD MPEG TS 227.2.2.8 port 1235
 Udp://@227.2.2.8:1235
- Mux3: HDSDI- RTSP://192.168.0.30:554/mux3.sdp
- Mux4: SD RTSP://192.168.0.30:554/mux4.sdp

Components



- A. Main PCB Encoder Decoder
- B. HDSDI input cable
- C. Composite input cable
- D. Power input 5-32 Volts
- E Ethernet RJ45 connector to PCB Molex
- F. Short cable to connect on board SD card holder to main PCB
- G. Optional extension cable and SD card holder available

Using MARIS GUARD Software

Maris Guard software allows you to find the IP address of the board Change IP address settings upgrade the board Firmware. Maris Guard contains its own browser to change other settings on the board without the need for a third party browser.



Using MARIS GUARD Software-2

Network Tab allows DHCP or fixed Ip to be setup.

Maris Guard				
		ar <mark>is</mark>	Gua	rd
Board	Properties:		DI	HCP or Fixed IP setup
Network	Static IP	192.168.1.114		
Update	Defualt Geteway:	255.255.255.0 192.168.1.114		
Download	MAC address: 0a:b)	5:09:7e:21:ec	Click "Ol	K" to save changes
About				
	Board IP:	192.168.1.114	Board ID: 0	Count: 1

Using MARIS GUARD Software-2

UPDATE Tab allows firmware to be upgraded

Maris Guard										
Maris Guard										
Board	Update Board:									
Network	PC Source Folder: Select firmware files Select source Contact Antrica to upgrade									
Update	Update To upgrading.									
Download	Note: Click on 'Select source' button to select source folder. The "Guard" send the files in the selected folder									
About	exactly in the structure in which they are arranged. Click 'Update' to start update the files. Click 'Reboot' to reboot the system.									
	Board IP: 192.168.1.114 Board ID: 0 Count: 1									

Using MARIS GUARD Software-2

To Enable Browser click on Go To Web- See Web Setup User Manual



Using the Web Page Info Button

To check the board video input status click here



The info "i" page

If this page is not showing video inputs are connected and locked You will need to setup the board to enable the correct inputs See the Web User manual for details.

http://192.168.1.114									x
			I	nfo					
4	System Info								
E L	Board	L							
C T S	CPU Type: IM Number: Speed: 8	1X6Q 4 300MH							
5	SW Info								
E I F I N	Build Date: Sep 3 2014 15:03:24 libudvpdvr.so: 2.9.0.1 LDVC: 2.2.7.1 FPGA: Unknown IP Address: 192.168.1.114 MAC Address: 0a:b5:09:7e:21:ec								
2	Camera								
	Name	Status	Resolu	tion	Interlace	d FP	s		
	SD1	Not Exist	Unknow	/n	Unknown	0			
	SD2	Not Exist	Unknow	/n	Unknown	0			
	SD3	Not Exist	Unknown		Unknown	0			
	SD4	Not Exist	Unknown		Unknown	0			
	HD1	Not Exist	Unknown		Unknown	0			
	HD2	Lock	1920X1080		Noninterla	ced 30			
	SD5	Not Exist	Unknown		Unknown	0			
	SD6	Not Exist	Unknown		Unknown	0			
	SD7	Not Exist	Unknow	/n	Unknown	0			
	SD8	Not Exist	Unknow	'n	Unknown	0			
5	Storage								
	Storage Total		Size Used Space		Space	Format			
-	/sd1	0 MB		0 MB	(0%)	Fat			
1	Temper	ature							
ć	54								
				-					
		-0-	-	-6	} i	*			



Support

This file plus user manuals Maris Guard and other Software is stored in a Cloud based folder

Please contact us for a link to these files

support@antrica.com +44 1628 626098 Quick Start Guide