

UART configuration

System

Config Number: **CFG 1**

Operation State: **Operational**

Camera CSI1: **None**

Camera CSI2: **None**

[Setup Generic Camera](#)

[Setup Analog Camera](#)

[Setup External Sync](#)

[UART](#) ←

[Network](#)

[Time and Date](#)

[RTSP Server](#)


[Display Drivers](#)

Frame Buffer 0: **tvout1**

Frame Buffer 1: **None**
After setting display drivers - reboot the system:

Not for serial 2 way data configuration

Settings to configure serial 2 way data, can be found Under Settings > Data > UART.

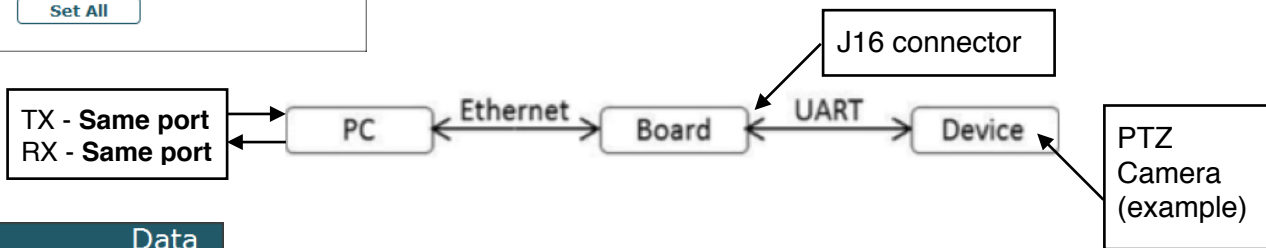

Data

[Data Source](#) ← Used for meta data

[GPIO](#) ← General purpose IO

[UART](#) ← Serial 2-way data configuration

Data

[Data Source](#)

[GPIO](#)

[UART](#)

UART: **ttymxc0**

IP Address:

192 . 168 . 0 . 24

Port: 1239 ←

Delay(ms): 10

Baud Rate: 9600 ←

Parity: **None**

size: **8 bit**

Flow Control: **None**

State: **On**

1. Use **0.0.0.0** - If the pc is initiating the serial 2 way data.
2. The IP Address of the PC, If the device is initiating the serial 2 way data, so the board knows where to send the data.

The **same port** is used all around.

The **Baud Rate** needs to be matched either end