
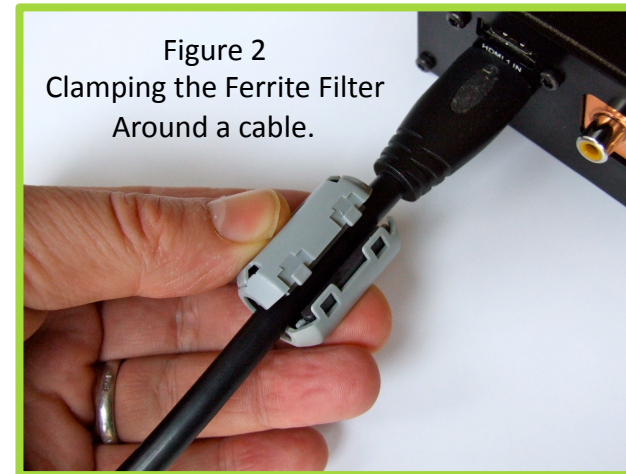


How to attached Ferrite Sleeves ANT-4000E Video Encoder

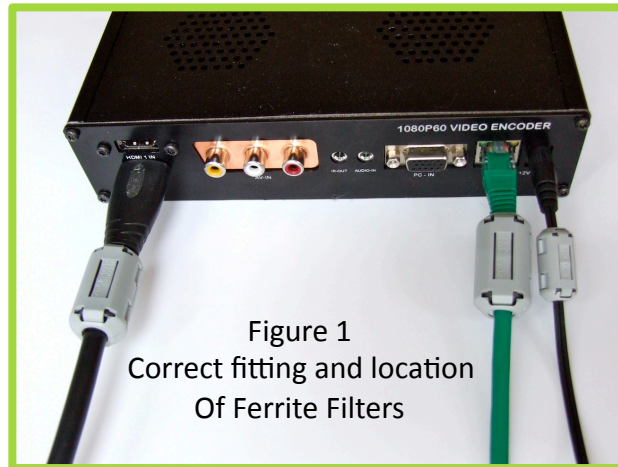

Your ANT-4000E is supplied with two ferrite cable filters which reduce Electromagnetic radiation from the cables.

INSTRUCTIONS:

- 1) If your Ethernet and HDMI cables are not already fitted with EMC Ferrites please use the two Cable Clamp Ferrites supplied in the box.
- 2) Figure 1 shows the correct location of the Ferrites when fitted , these should be as close to Ethernet and HDMI connector as possible. If required use a zip strap or electrical tape to stop the Ferrites sliding down the cable.
- 3) Figure 2 two shows how to fit the Ferrite to the cable. Simply snap together the two halves to the Ferrite over the cable until the male and female clips fully engage

ANTRICA